


Carefully read this Quick Setup Guide before setting the printer. For more information, refer to the User's Guide supplied with the printer.

在设置打印机之前，请仔细阅读本安装指南，如果您想了解更详细的情况，请参阅随机的用户手册。

1. Packing List

装箱清单

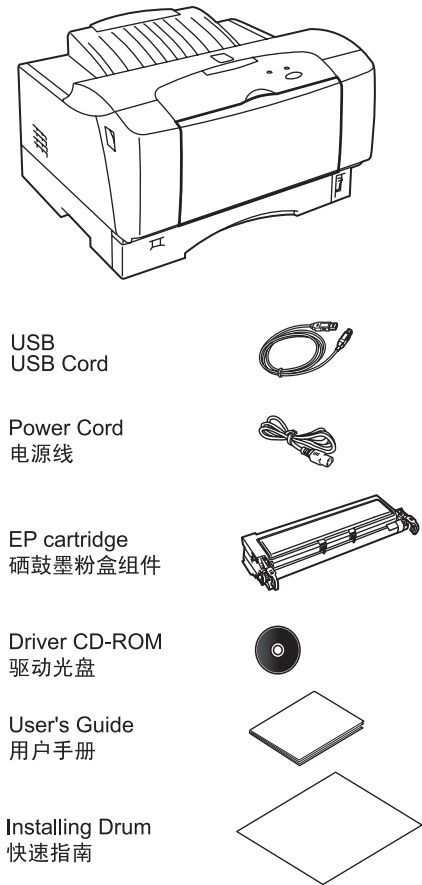

Keep the packing materials for possible future transport. If you do not pack the machine correctly, you could void your warranty.

请将包装材料保存好，以便再次搬运时使用。如果因未正确包装本打印机而导致的任何损坏，不在联想保修范围内。

2. Choosing a Location





选择地点

Space requirements

Ensure that there is enough space around printer for normal operation, paper replacement, and maintenance.







空间要求

在打印机旁边预留足够的空间以确保打印机的运作、纸张的更换、维护都能够方便进行。

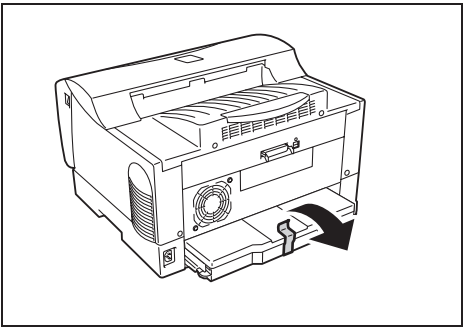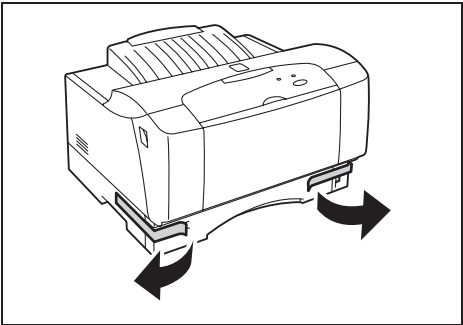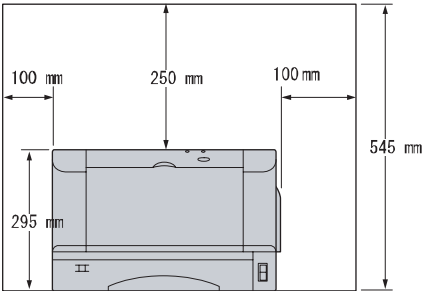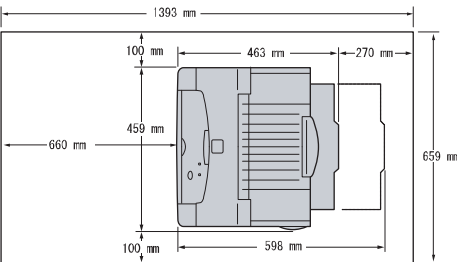

3. Installing Drum


安装硒鼓


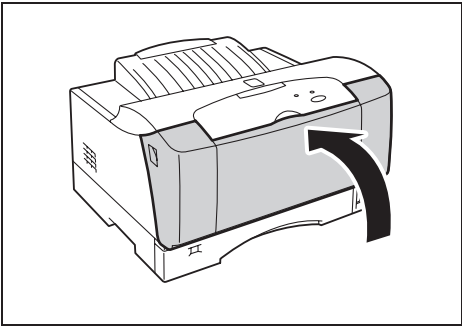
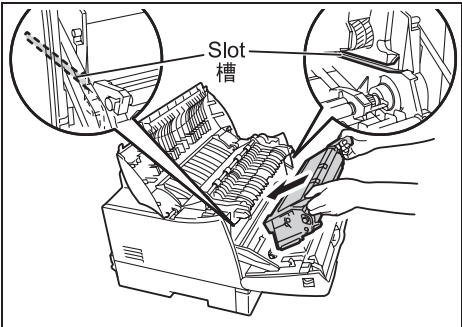
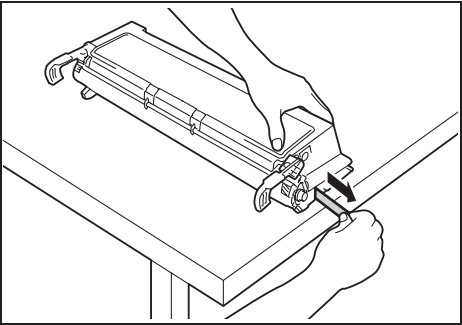
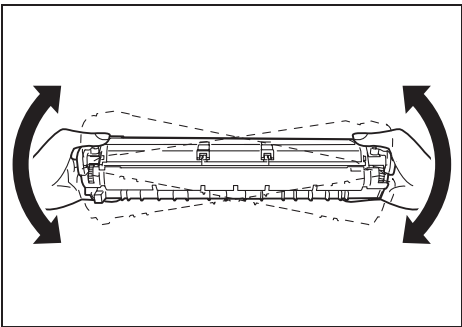
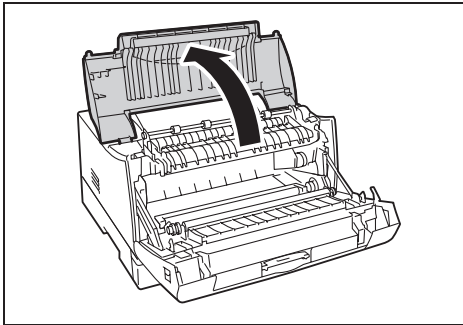
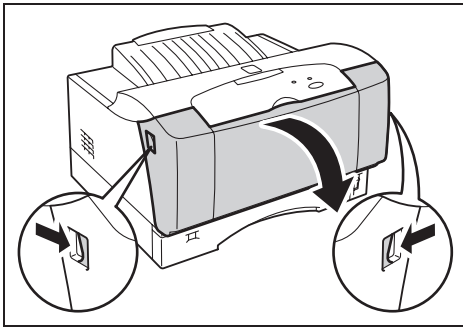


4. Setting Up Your Printer

设置打印机

Loading paper into paper cassette.  
将纸放进纸盒中。

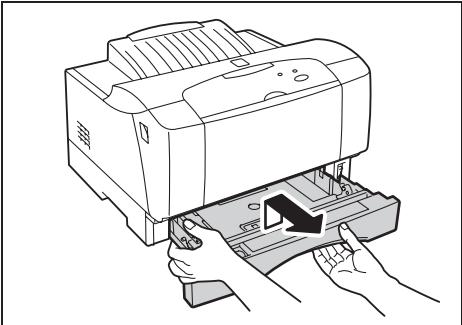

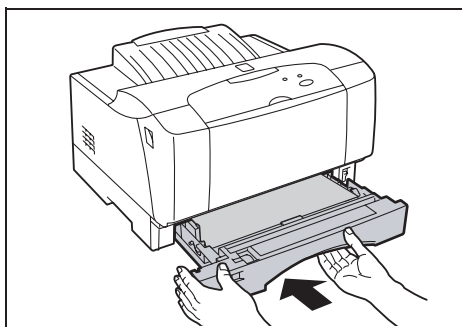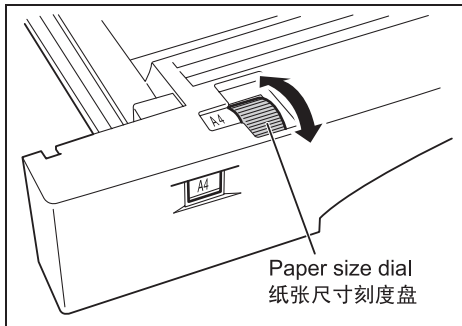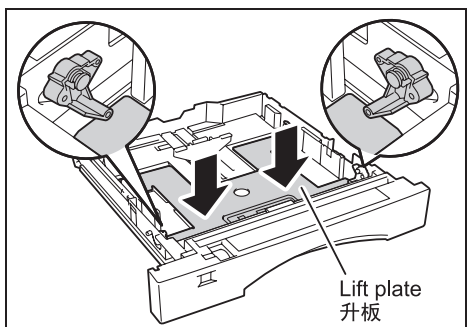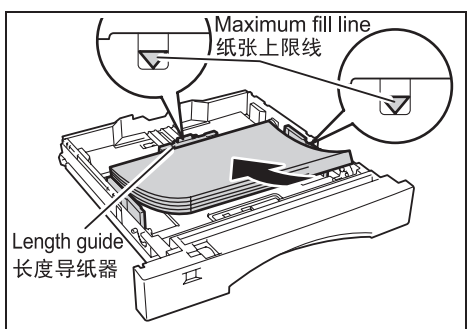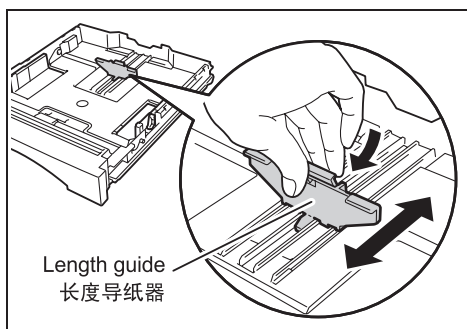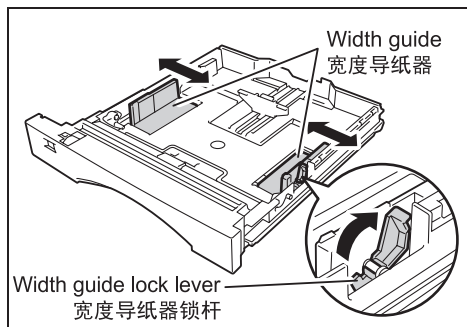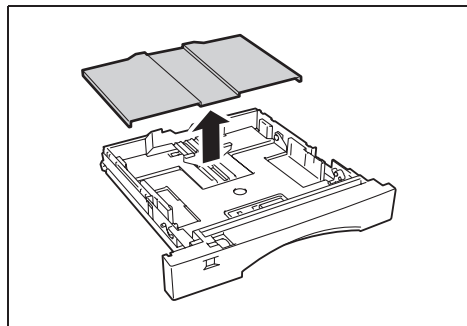

## 5. Connecting the Printer to the PC

将打印机连接到电脑上

### Minimum System Requirements

IBM PC and compatible machine with Pentium/Celeron family or AMD K6/Athlon/Duron family. (300 MHz is recommended.)

### 最低配置要求

配置有Pentium/Celeron系列、AMD K6/Athlon/Duron家族或兼容200MHz处理器的IBM兼容电脑（建议使用300MHz处理器）

### Windows 7/Vista/XP/2000


IEEE 1284 Type B Parallel Interface or USB Port.

### Windows 7/Vista/XP/2000

IEEE 1284 Type B 并行端口或USB2.0端口。

### Connecting the Parallel or USB cables




连接并口打印电缆或SUB电缆

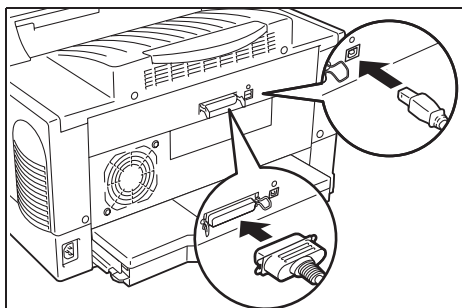

1. Turn off the printer and your PC.
  2. Start your PC.
  3. Turn on the printer power switch.
  4. When PC and the printer are ready, connect one end of the USB cable to the USB Port of your PC.
  5. Connect the other end of the USB cable to the USB port on the back of the printer.
  6. The 'New Hardware Found' dialog box appears, then follow the instructions on the computer screen.
1. 关闭电脑与打印机。
  2. 启动电脑。
  3. 启动打印机。
  4. 当计算机与打印机都准备就绪时，将接口电缆的一端连接到电脑的USB端口。
  5. 将接口电缆的另一端连接到打印机后端的USB接口上。
  6. 计算机自动查找新硬件，请按屏幕指示操作。

## Connection to Power Supply

连接电源

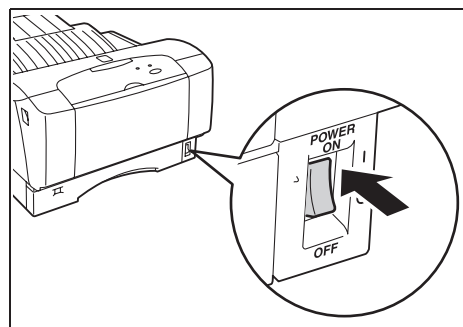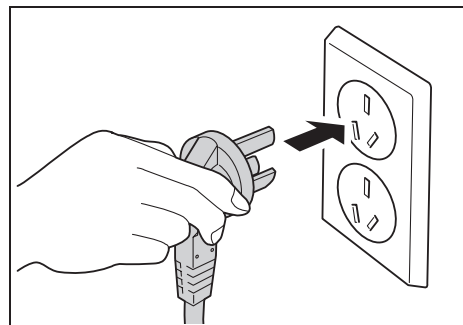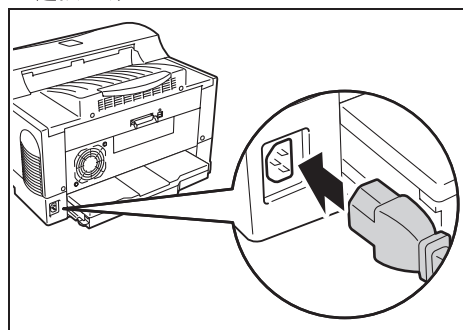

## 6. Connection to Power Supply

安装打印机驱动程序

1. Insert the supplied CD-ROM to your CD-ROM drive.
2. Please follow the on-screen instructions to install the printer driver.
3. On "Main Menu" screen, select "Exit" to close the installation.
4. Keep the CD-ROM in a safe place.

1. 将CD-ROM插入您的CD-ROM驱动器中。
2. 遵循屏幕上的指南安装打印机驱动程序。
3. 在主菜单屏幕上，点击“退出”关闭安装程序。
4. 将CD-ROM存放于安全位置。

**lenovo 联想**

Copyright © 2009, Lenovo (Beijing) Ltd.,  
版权所有 © 2009 联想（北京）有限公司